

How To Change A Halogen Light Bulb



How to change a halogen bulb?

Replacing Your Cooker Hood Halogen Bulbs

1. Please make sure that your cooker hood is switched off at the mains before any work is carried out on your extractor.
2. Do not remove the hood light fitting. Changing the halogen light bulb is done from underneath your cooker hood.
3. Take a small electrical screwdriver (Fig A). Remove the black plastic ring (or steel ring dependant of the extractor type) carefully, be aware that the glass will also be released at the same time so ensure that you place a soft cloth under your extractor fan just in case the glass lenses fall.

(If your Lights do not have the inner Black/steel ring and are just a plain brushed steel fitting, then this will need to be twisted instead to gain access to the bulb SEE IMAGE 2)

4. Now remove the halogen light bulb from the light fitting. Please note that the halogen bulb has two long prongs and will need to be removed by pulling firmly sideways!
5. Once you have removed the old bulb, replace with the new one. Be aware that you must not touch the new bulb with your fingers; use a cloth or tissue to insert the new bulb. The reason for this is that halogen bulbs over heat and pop if grease or oil is present on the glass.
6. Repeat above process to replace the lens and clips.

Bulbs are not covered by warranty and can be purchased from all major Diy stores or your local electrical retailer.

Image 1

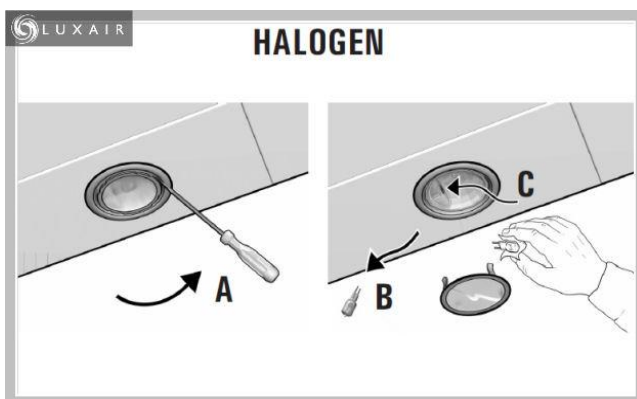


Image 2

